



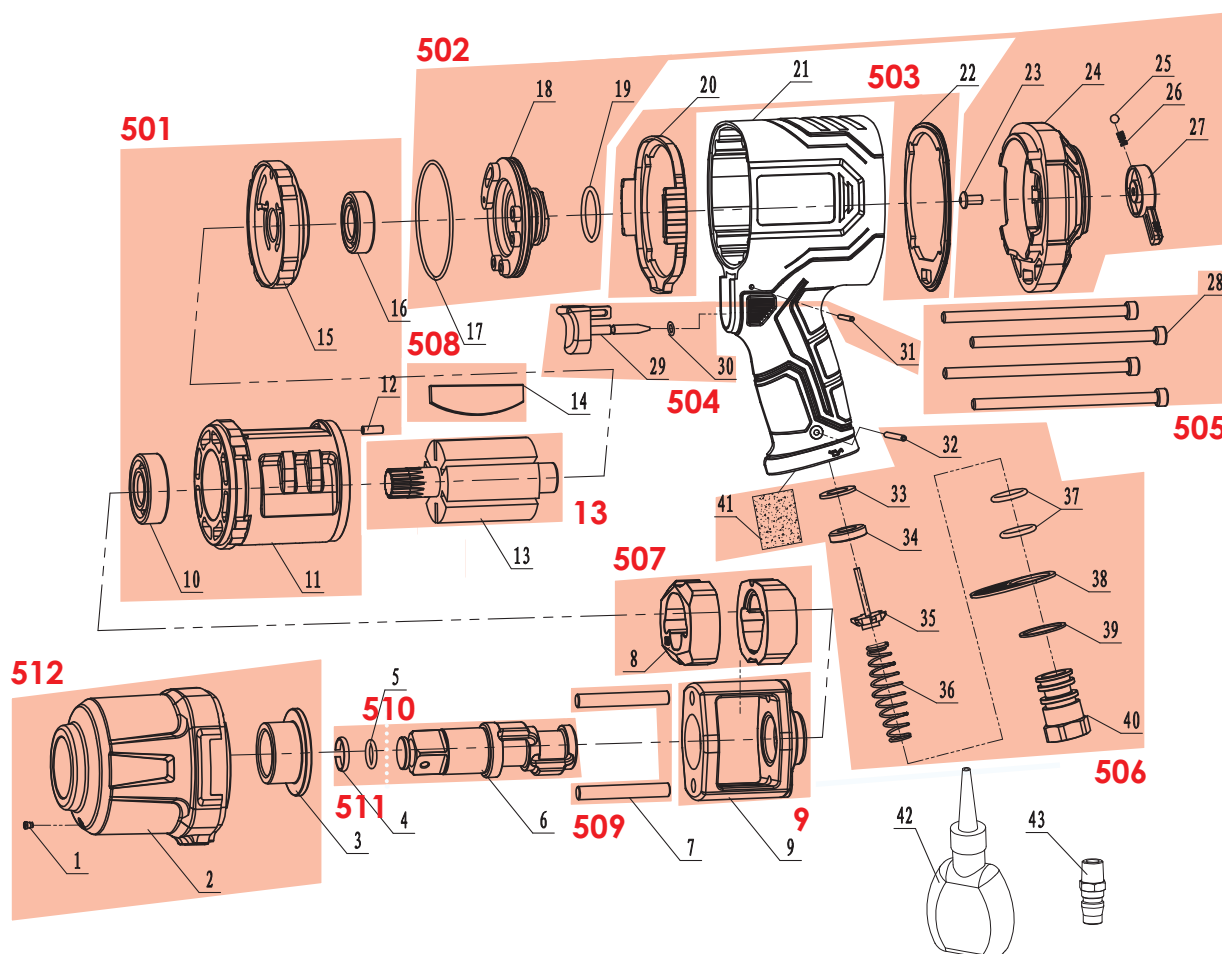

Set	VIGOR No.	Position und Bezeichnung	Position and Name	
9	V6900-02	Hammerkorb	Hammer Case	1
13	V6900-01	Rotor	Rotor	1
501	V6900-03/5	Zylindereinheit Inhalt: 10, 11, 12, 15, 16	Cylinder unit Contents: 10, 11, 12, 15, 16	5
502	V6900-04/8	Kompletter Umsteller Inhalt: 17, 18, 19, 23, 24, 25, 26, 27	Toggle Switch Contents: 17, 18, 19, 23, 24, 25, 26, 27	8
503	V6900-05/2	Dichtungssatz Inhalt: 20, 22	Gasket set Contents: 20, 22	2
504	V6900-06/3	Abzugshebel Inhalt: 29, 30, 31	Trigger Contents: 29, 30, 31	3
505	V6900-07/4	Gehäuseschrauben Inhalt: 28 (4x)	Housing Screws Contents: 28 (4x)	4
506	V6900-08/11	Ventileinheit Inhalt: 32, 33, 34, 35, 36, 37 (2x), 38, 39, 40, 41	Valve unit Contents: 32, 33, 34, 35, 36, 37 (2x), 38, 39, 40, 41	11
507	V6900-09/2	Hammer-Set Inhalt: 8 (2x)	Hammer set Contents: 8 (2x)	2

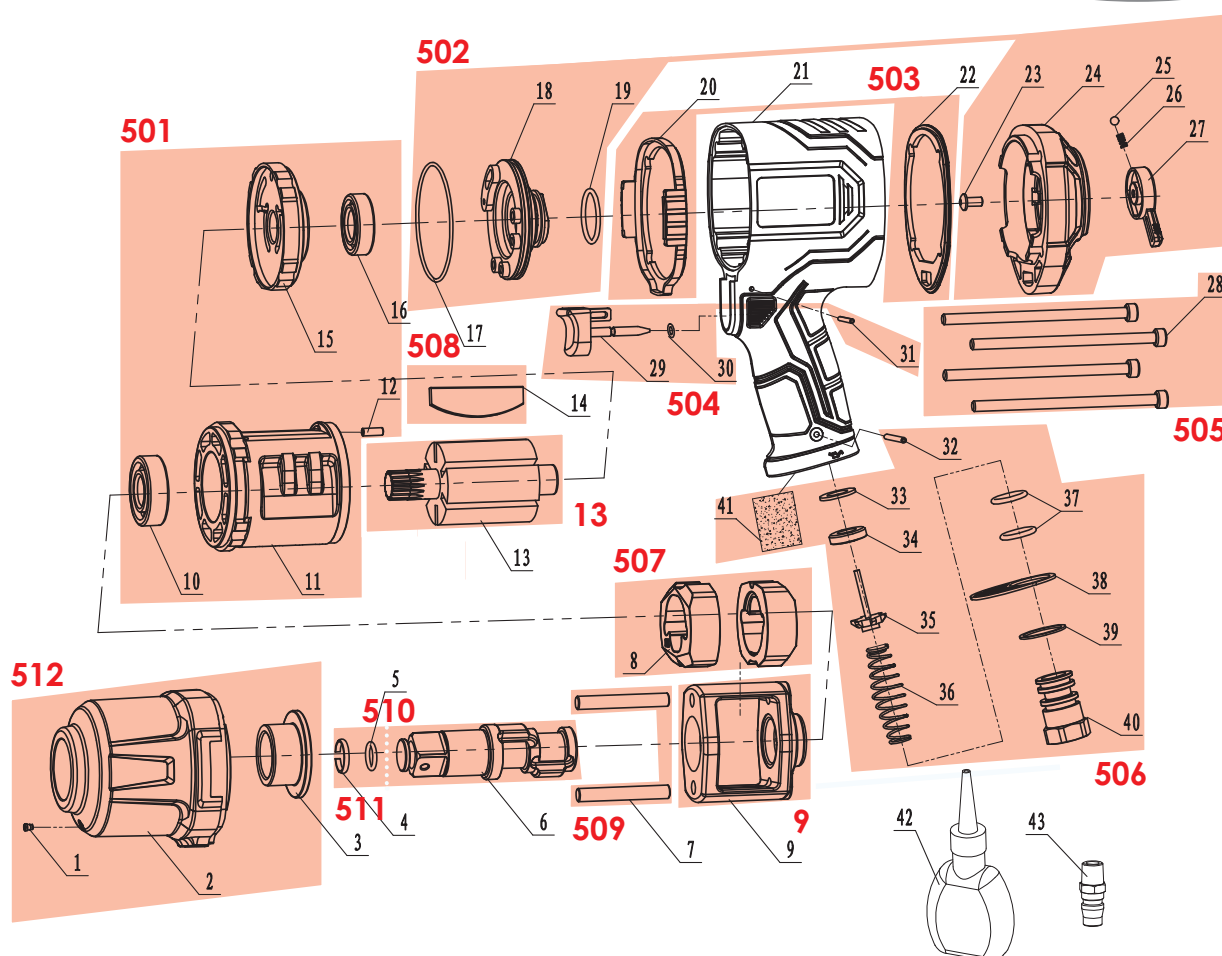

Set	VIGOR No.	Position und Bezeichnung	Position and Name	
508	V6900-010/6	Lamellen Inhalt: 14 (6x)	Blades Contents: 14 (6x)	6
509	V6900-011/2	Haltebolzen Inhalt: 7 (2x)	Pin Contents: 7 (2x)	2
510	V6900-012/3	Vierkant Inhalt: 4, 5, 6	Square Contents: 4, 5, 6	3
511	V6900-013/2	Ring Satz Inhalt: 4, 5	Ring set Contents: 4, 5	2
512	V6900-014/3	Gehäusekopf Inhalt: 1, 2, 3	Housing front Contents: 1, 2, 3	3